



CLOSING THE EME1 OR EME2 SWITCHES OPEN PRS INPUT TO THE CONTROLLER

EME1 SWITCH MEANS EME=1, PRS=0

EME2 SWITCH MEANS EME=1, PRS=0

THIS INPUTS MAKE THE CONTROLLER SELECT THE APPROPRIATE EMERGENCY STATION

IF SECONDARY EMERGENCY STATION IS DEFINED AS 0 OR IF ATTENDANT SERVICE IS NOT REQUIRED THE CIRCUIT SHOWN IS NOT NEEDED.

CONTROLES S. A.

Electrónica Industrial y Telecomunicaciones

AVENIDA RIVERA 3314 TEL +598(2) 622 0651
 MONTEVIDEO 11300 FAX +598(2) 622 2048
 URUGUAY www.controles.com
 E-mail info@controles.com

**CEA51FA CONTROLLER
 USER'S MANUAL**

Version 5.0

99/06/08

Fig. 15

Auxiliary circuit for two emergency stations